


Bioloid Premium Kit Robot Arm Assembly Manual

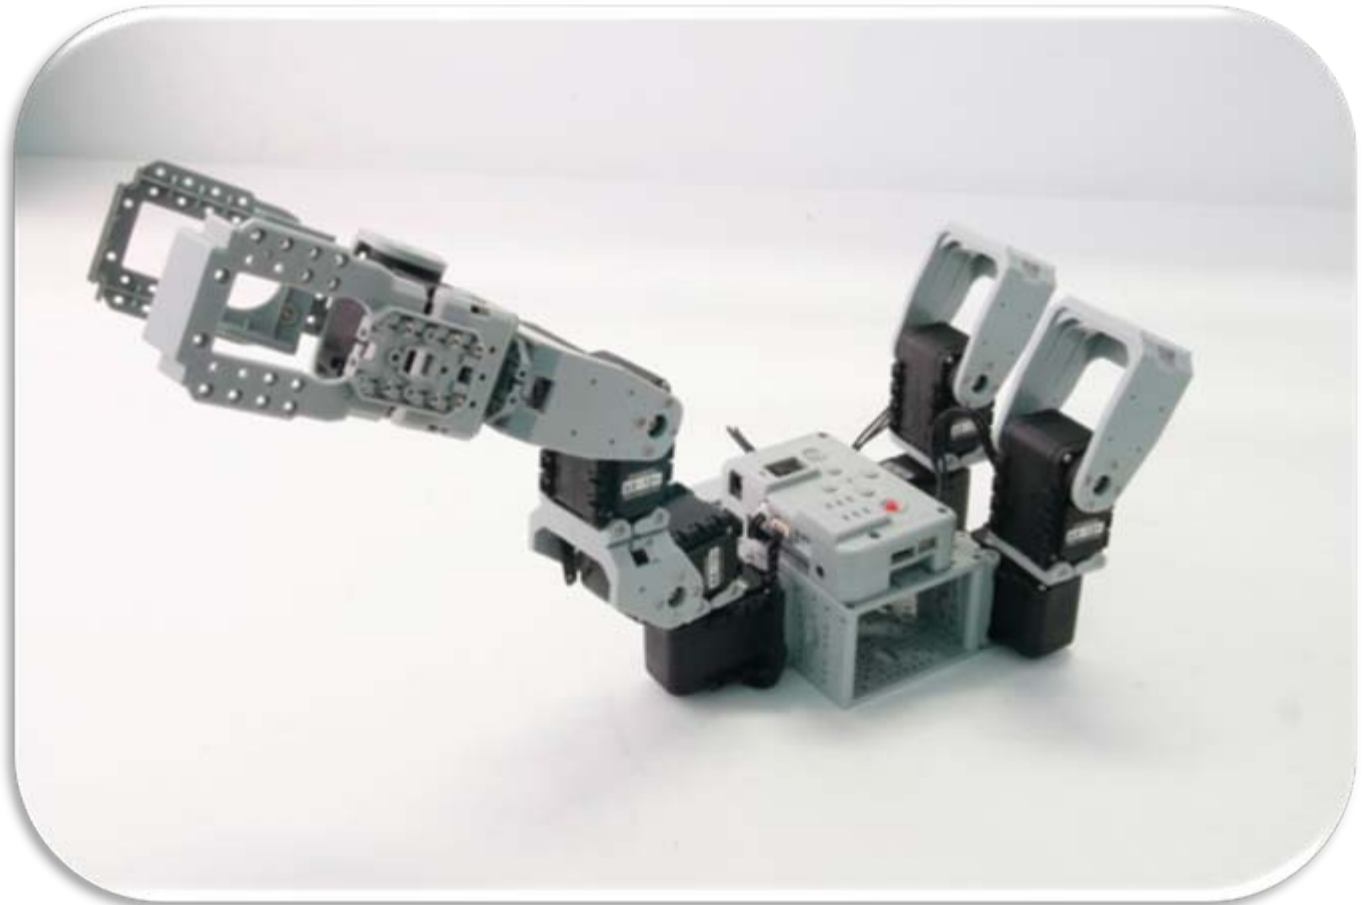

Attention!

Before proceeding with assembly, you must ensure each actuator's horn is properly aligned. To visually verify proper alignment, the notch from the horn should be in line with the notch from the actuator's body.


If not, perform one of the following actions:

A. Turn the horn manually until its properly aligned.

B. Use Dynamixel Wizard.

1. Start RoboPlus and run Dynamixel Wizard.
2. Connect the actuator to the computer through USB2Dynamixel. Don't forget to supply power to the actuator separately.
3. Select the correct port, click on the "Open Port" icon, and click on "Start Search."
4. On address 30, Goal Position, click on "Center Position." Dynamixel Wizard will then align the horn; you can visually verify horn alignment afterwards.

(For more information, please refer to Dynamixel Management.)

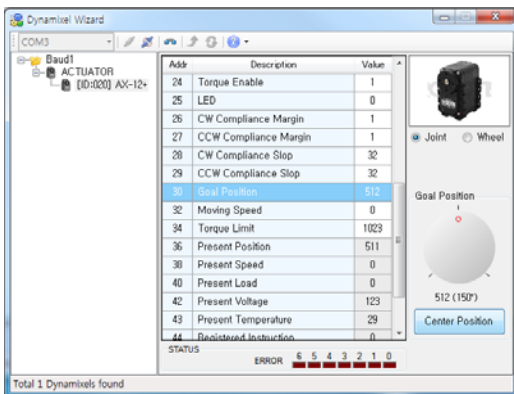

Dynamixel Wizard



properly aligned horn

*Some robots may require a specific horn alignment before assembly.
Please follow assembly instructions closely if such horn alignment is necessary.

Tips!

- I. Always assign ID numbers to the actuators before assembly. Robotis recommends you assign ID's by one actuator at a time.
- II. You may need apply gentle pressure to fit nuts into the actuator's body. The tight fit is necessary to facilitate assembly.
 - A. Insert only one nut at a time.
 - B. Use your screwdriver to apply pressure on the nut.
 - C. Point the screwdriver away from your body and away from other people.



Bioloid Robot Arm – Getting Started

STEP 1

Attach ID4 to F3. (Do not misalign horn position.)

F3 x 1

S1 x 4

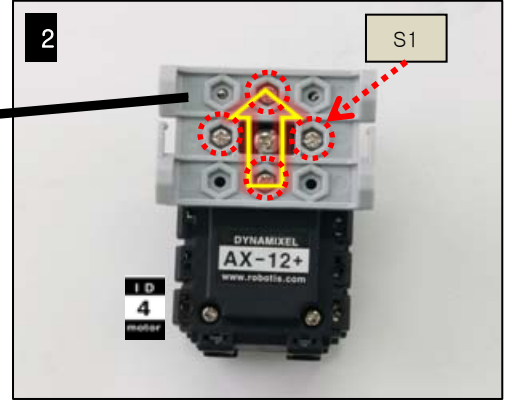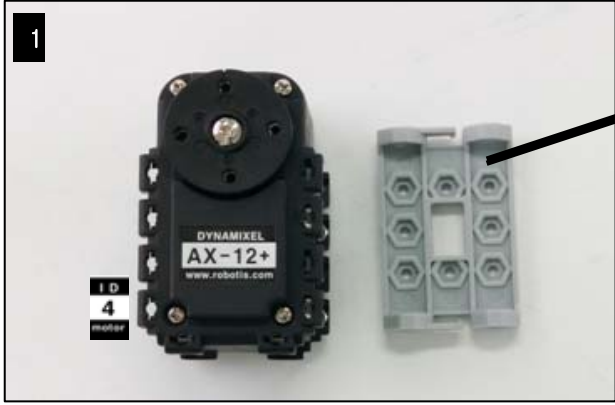

STEP 2

Attach ID2, ID3, F1, and F3 together. (Do not misalign horn position.)

F1 x 1

F3 x 1



S1 x 12

N1 x 12

BU x 1

WA x 1

S-B x 1

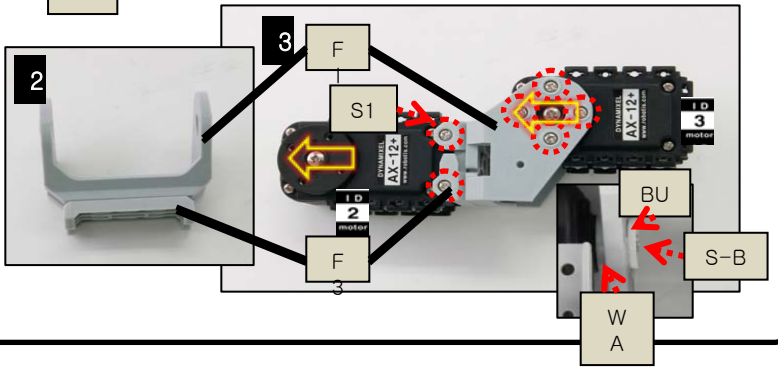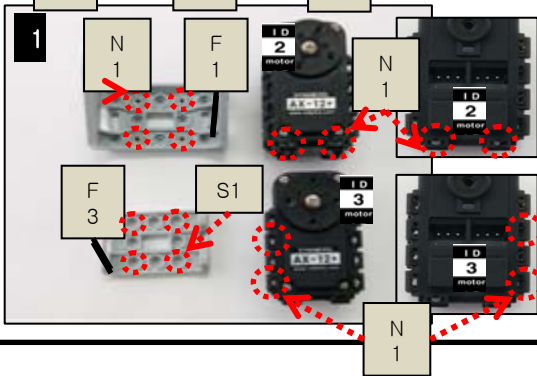

STEP 3

Attach F3, F4, and F10 together.



F3 x 1

F4 x 1

F10 x 1


S3 x 4

N1 x 4

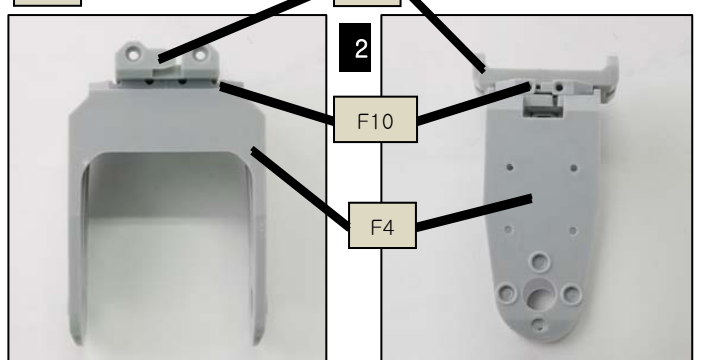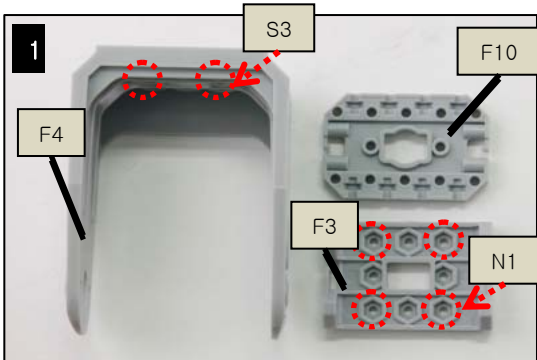


STEP 4

Attach F2, F3, F8, and F10 together.

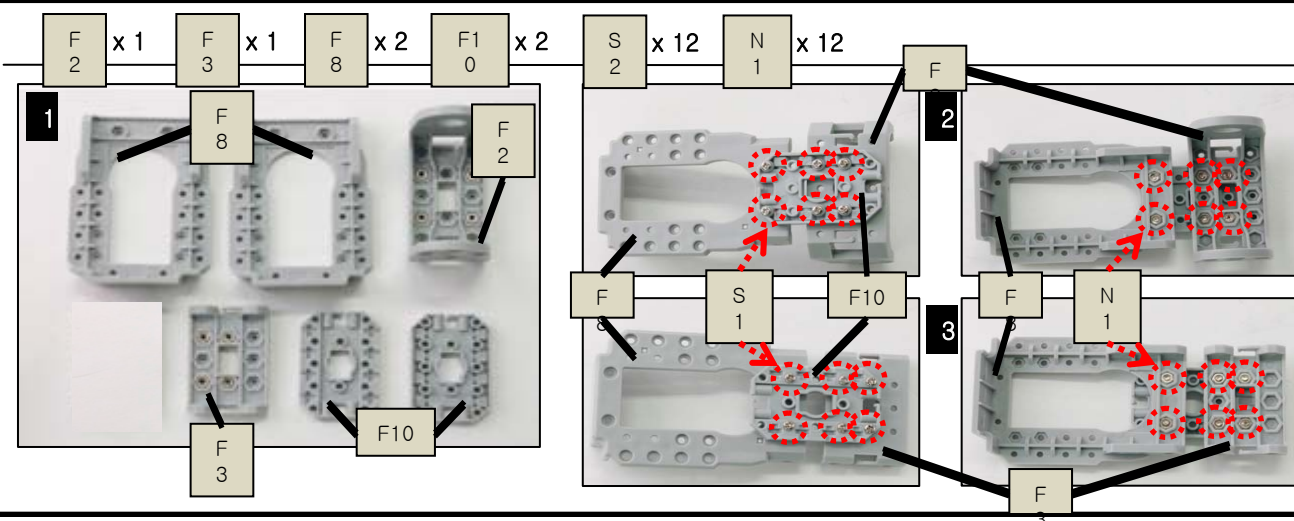


STEP 5

Attach STEP④ to ID1. (Do not misalign horn position.)

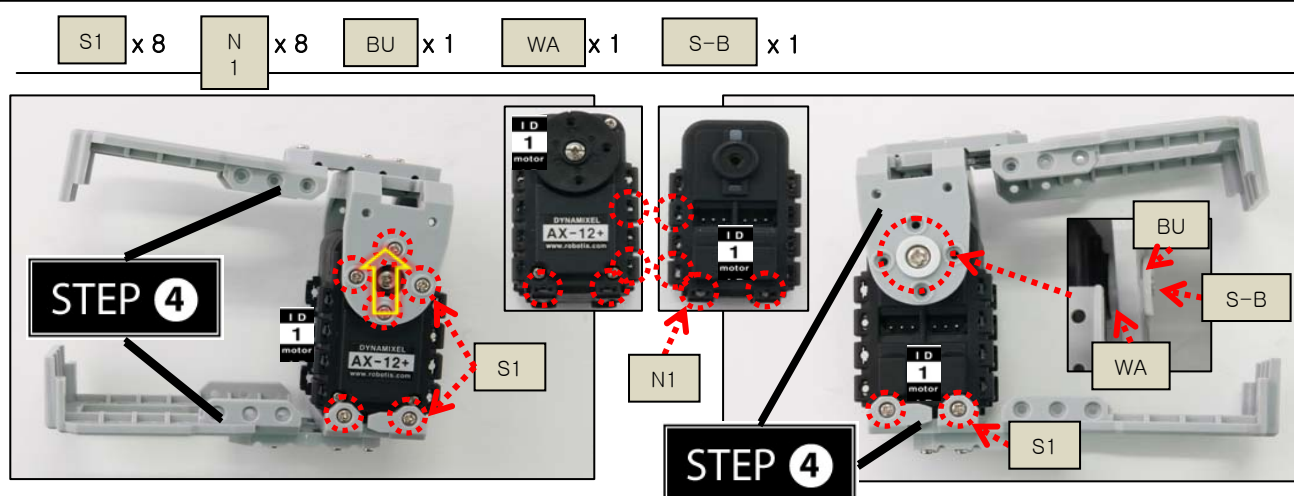


STEP 6

Attach STEP③ to STEP⑤.

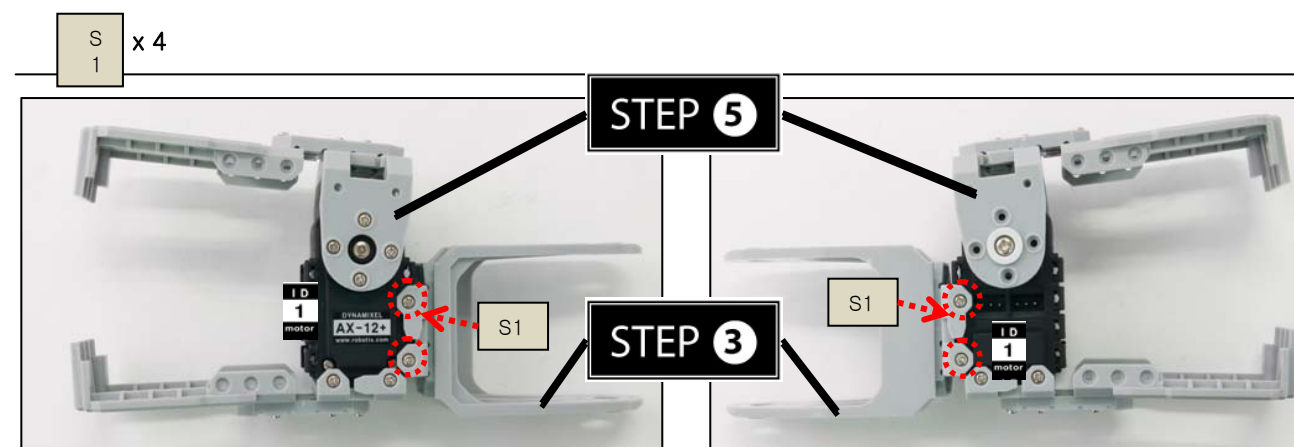


STEP 7

Attach STEP①, STEP②, and STEP⑥ together. (Do not misalign horn position.)

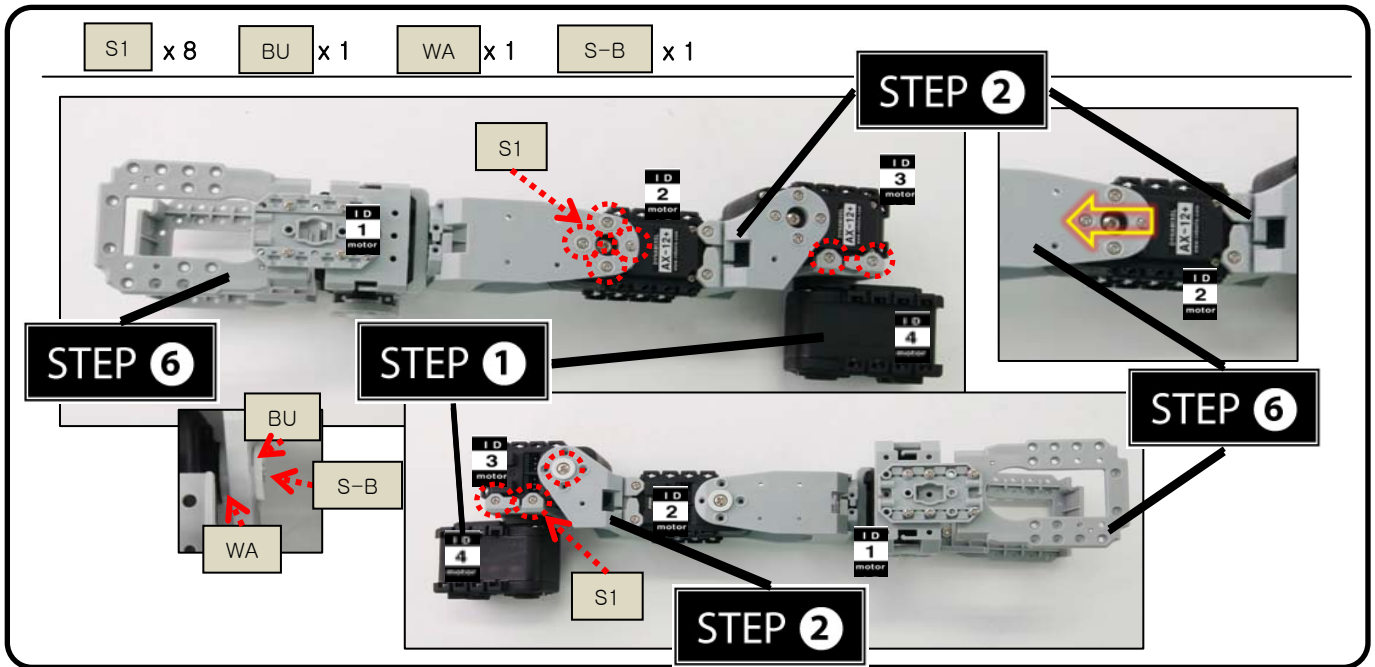


STEP 8

Attach ID6, ID8, and F3 together. (Do not misalign horn position.)

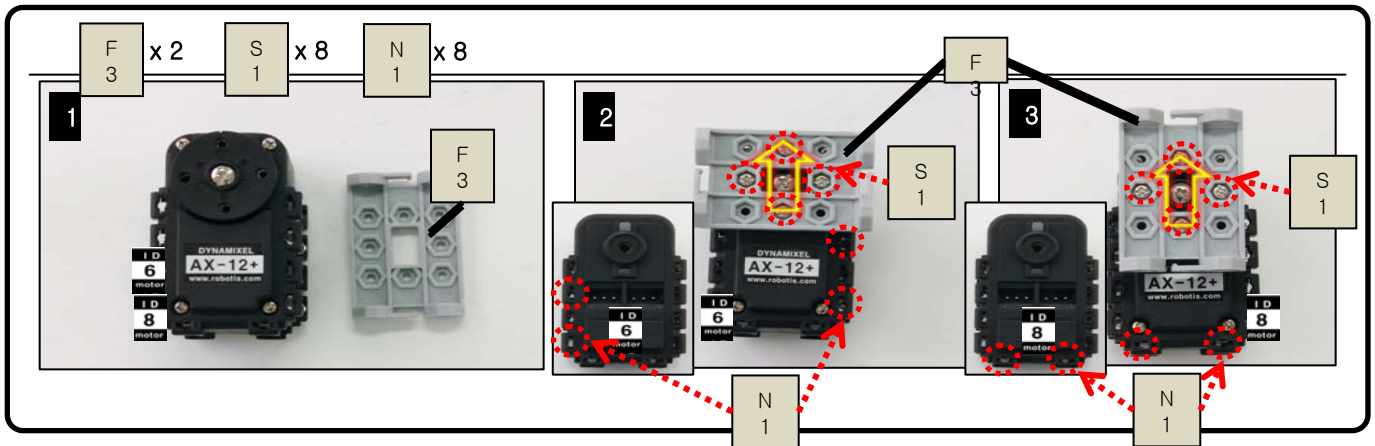

STEP 9


Attach ID5, ID7, and F4 together. (Do not misalign horn position.)

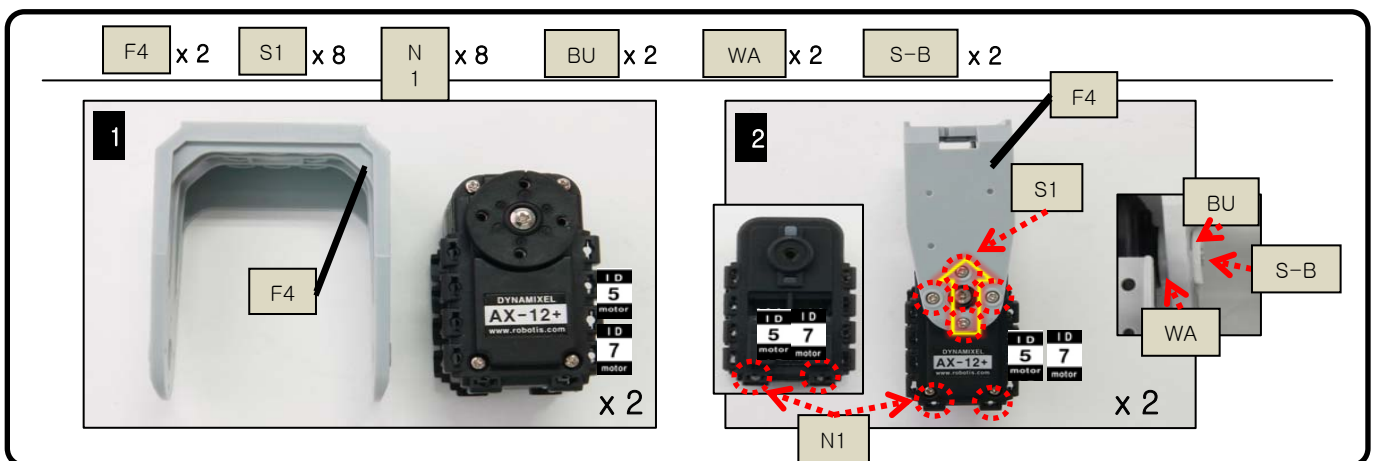

STEP 10

Attach STEP⑧ to STEP⑨.


S1 x 8

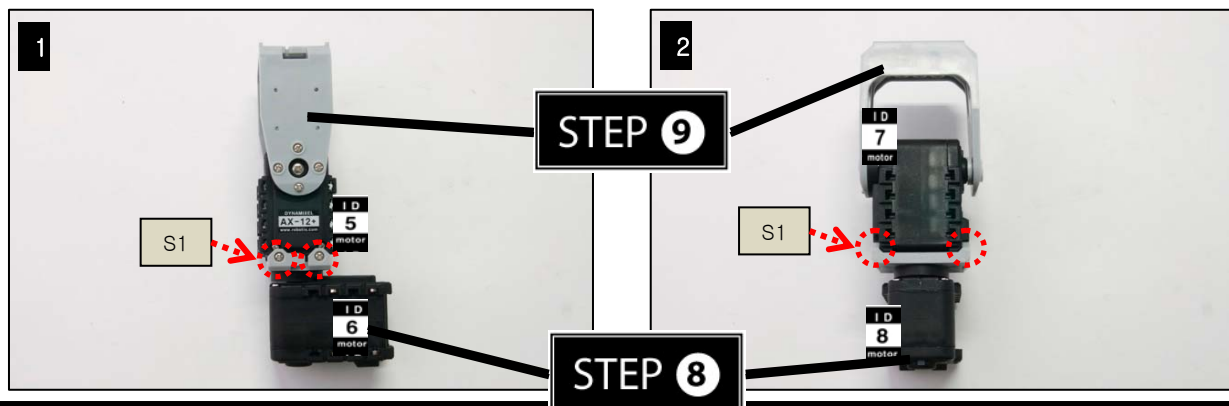

STEP 11

Attach F3 to F52.


F3 x 2 F52 x 1 S1 x 8 N1 x 8

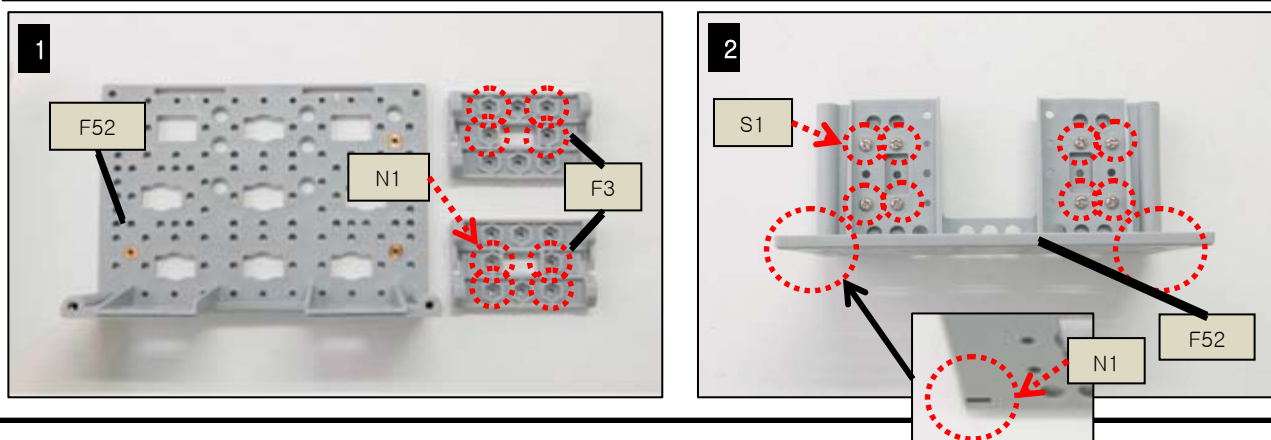

STEP 12

Attach F3 to F51.


F3 x 1 F51 x 1 S1 x 4 N1 x 4

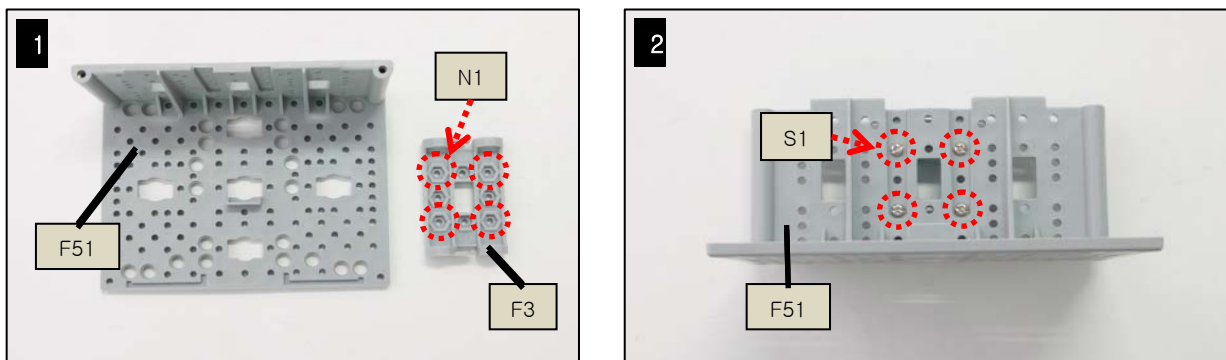

STEP 13

Attach F3, F10, and F60 together.


F3 x 1 F10 x 2 F60 x 1 S5 x 4 N1 x 4

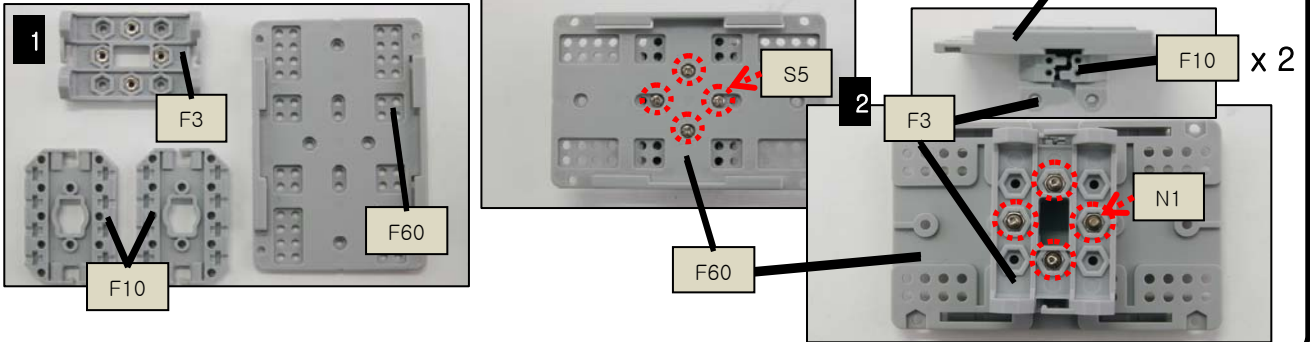

STEP 14

Attach STEP 11, STEP 12, and STEP 13 together.


S1 x 4 S12 x 4 N1 x 4

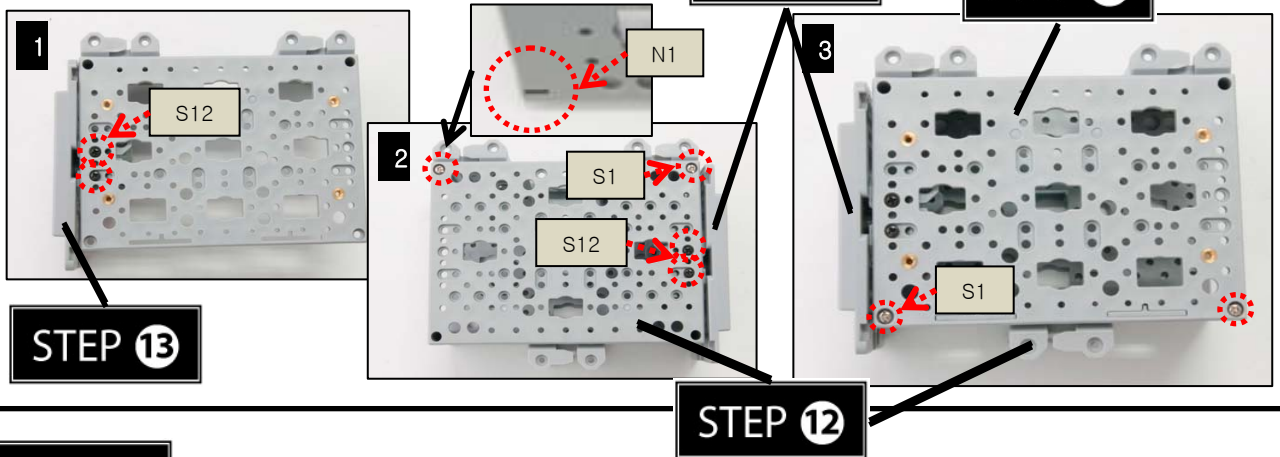

STEP 15

Attach STEP 7, STEP 10, STEP 14, and CM-510 together.

S1 x 16 CM-510 x 1

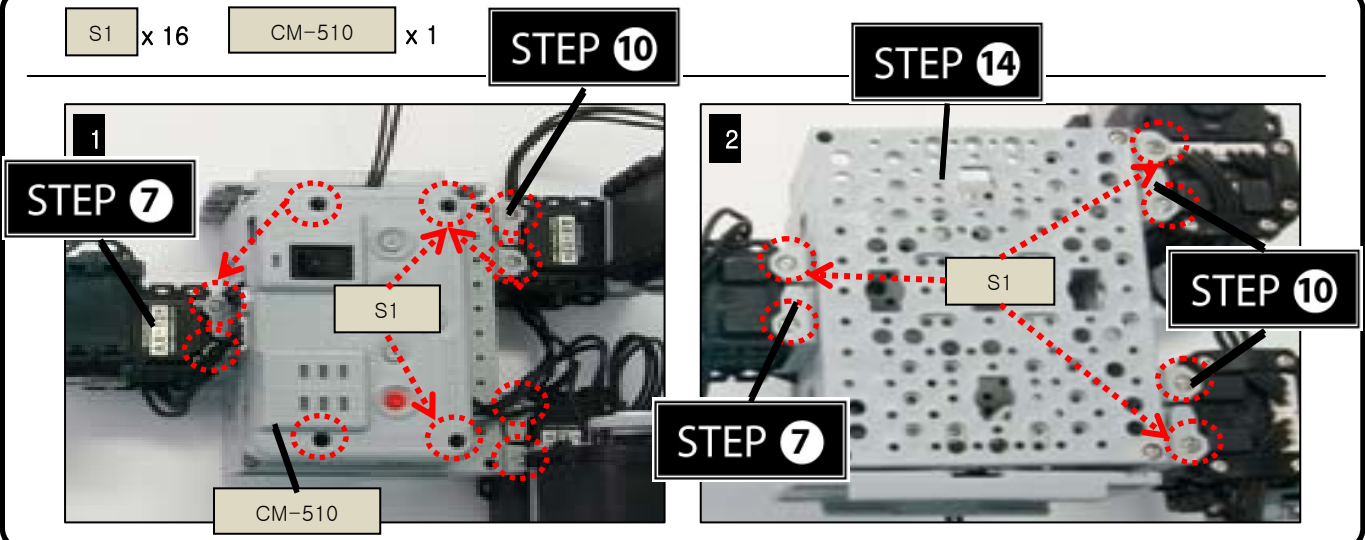

STEP 16

With 2 CABLE-10 connect ID6 to ID8; ID8 to CM-510.

With 6 CABLE-14 connect the following:


ID1 to ID2; ID2 to ID3; ID3 to ID4; ID4 to CM-510; ID5 to ID6; ID7 to ID8.

CABLE-10

x 2

CABLE-14

x 6


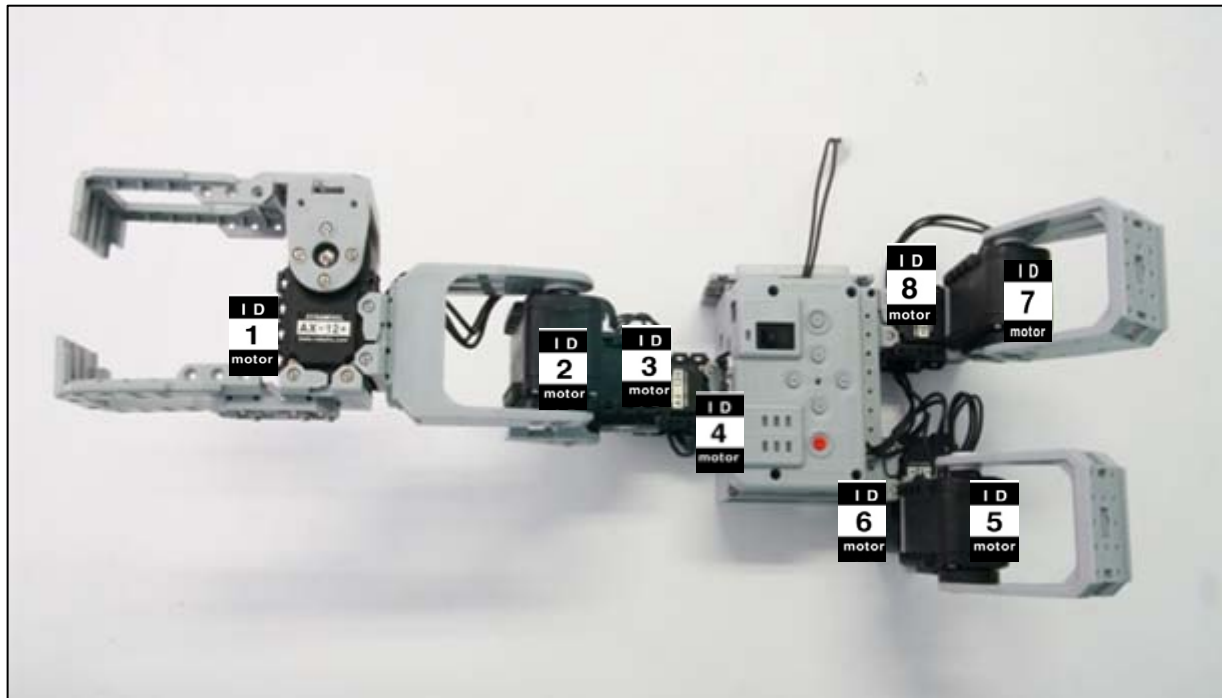



STEP 17

Connect the battery through the battery cable.

BATTERY

x 1

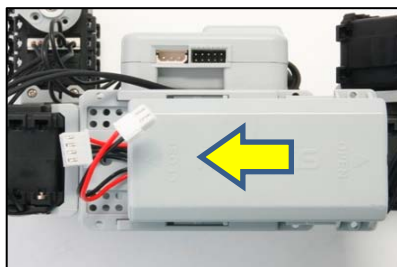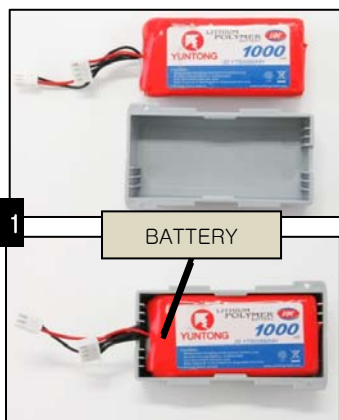

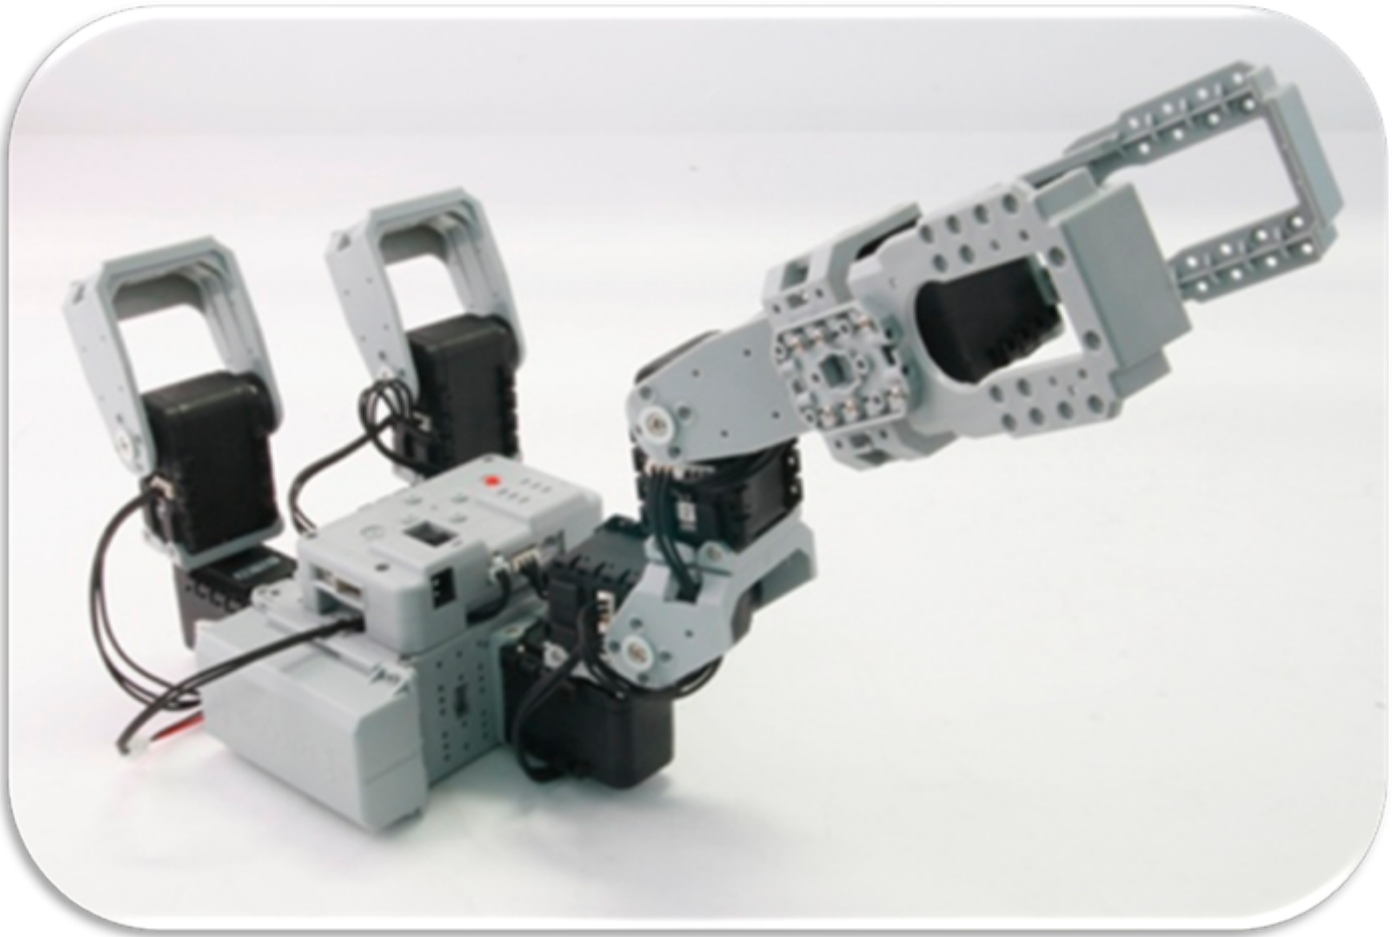

Assembly Check

After assembly please check the following procedure to ensure correctness.

STEP 1

Run the assembly check program

Set the robot in **PLAY** mode; hold the **D** button then press **START**.

Once the **START** button is pressed, the assembly check program begins.

STEP 2

AX12+ initial position and ID check

Select each actuator separately and compare it to the picture below.

Ensure the actuators' horns are properly aligned (the horn's notch should be aligned with the actuator's). Pressing the **U** or **D** button selects one actuator at a time.



The selected actuator's LED lights up and goes to its initial position.

Check starts from ID1.

U moves to the next ID in ascending numerical order; **D**, in descending numerical order.

If the actuator's ID does not exist then the robot beeps.

Although the LED may lit if there is no power, then check the wiring on the actuator.

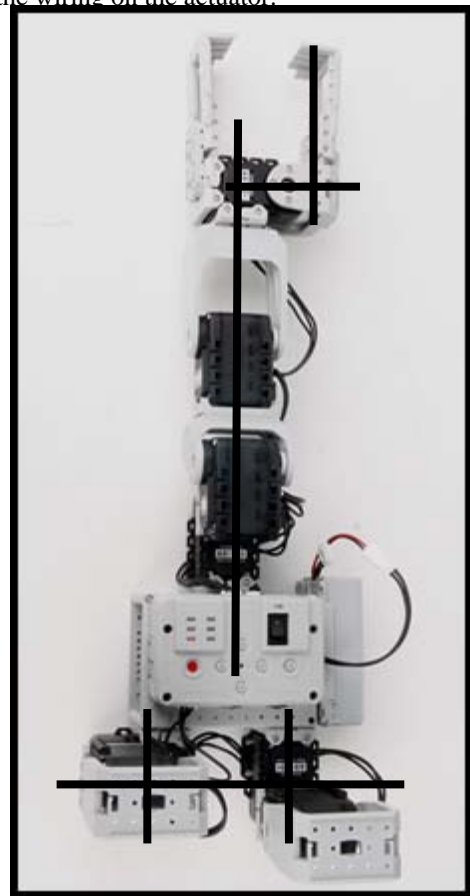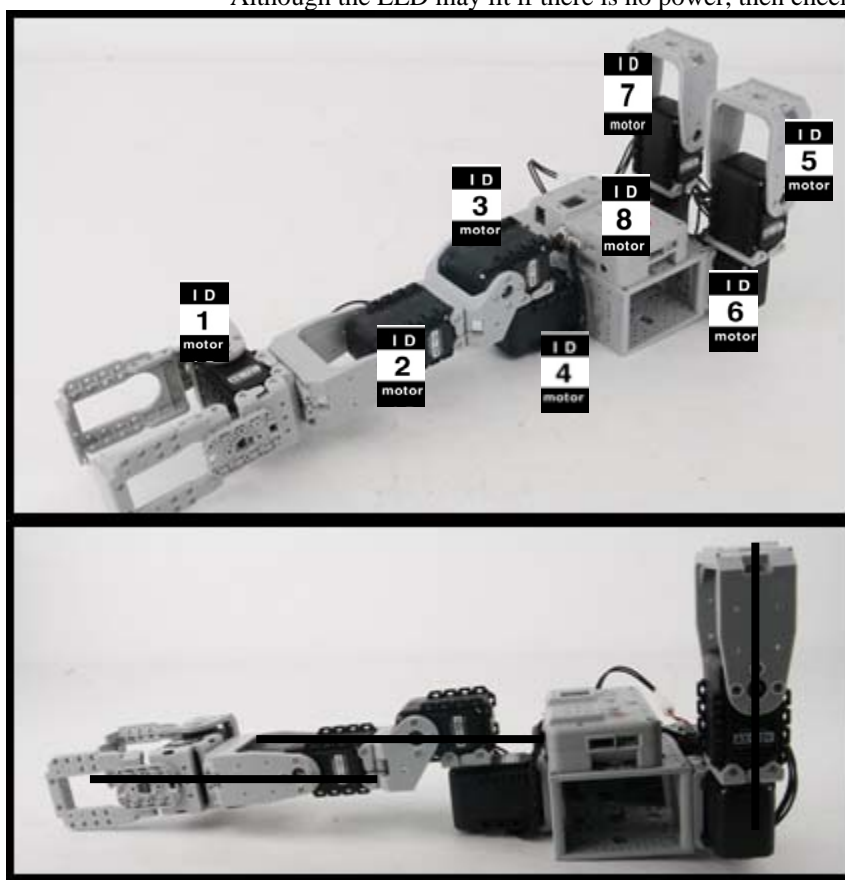

STEP 3

Sensor and behavior check

From STEP② press **R**. The robot returns to its initial position as pictured above.

Place your hand close to the sensors as pictured below. Robot behavior begins.

If the robot does not behave as pictured below, then check the sensor wiring and its port.

Pressing **L** will return the robot back to STEP②.

STEP 4

If everything works fine, play the robot.

Set the robot in **PLAY** mode and press **START**. The robot will play.